



Manual Instruction

Precautions:

Ensure correct polarity of cell. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.

When the megaphone is not in use for a long time, remove the dry cells. Drained cells or rechargeable battery will not give enough sound volume. Replace cells or charge the battery at regular intervals, for optimum result.

Operation:

Open the back cover by pressing the "Open Button". Insert the rechargeable battery or 8 "C" cell batteries, then close the back until it locks. Now your megaphone is ready for action. Press the On switch. The rechargeable battery is lightweight and will not make the megaphone heavier, using the 8 "C" cells batteries makes the megaphone heavier.

When using the megaphone, place your lips as close as possible to the megaphone. Adjust the Volume Control to the desired level without causing any howling or feedback.

When using the USB, SD, AUX function, adjust the switch to USB function on the handle, place the USB or SD card into the socket.

Adjust the volume control to the minimum before recording. To begin recording press the REC button and the indicator light will turn on. Now your megaphone is ready to record, you can record for 16 seconds. Press the REC button after finishing your recording.

Features:

The Megaphone is a compact design with clear loud sound.

It is lightweight and portable, perfect for large meetings, assembly, propaganda....etc.

- Talk Switch / Siren Switch / USB Switch
- Microphone has volume control
- ABS Plastic Construction
- Favorable Range: 500 Meters
- Carry Strap
- 50 watts

Technical Information:

Accepts 8 "C" cell batteries (NOT INCLUDED)

Rechargeable Battery (INCLUDED)

Rated Power: 50 watts

Overall Length: 350mm

Bell Width: 250mm